



IMIki T14



User Manual



 
Package List



Earbuds



Charging Case



User manual



Eartips



Charging cable

Packing list

1 X IMIKI earbuds ANC

1 X User manual

2 X Pairs of additional eartips (S&L)

1 X Charging case

1 X Type-C Charging Cable

Download the App

Scan the following QR code, download and install the IMIKI Life App



"Scan QR Code and Download"

Earphone Wearing



Instructions for Use

Power on/off

Open the charging case and the earphones turn on automatically to turn off put headset back on charging case and close.

Bluetooth pairing

Open the charging case and search for Search for "IMIKI T14". After the pairing record is established, the earplugs are put in the charging case. The charging case cover is open. The ear will reconnect automatically in 10 seconds. If the pairing fails after 5 minutes, the earphones automatically shut down.

Battery display

If charging box $\leq 30\%$, the red light blinks during charge
Charging box between $30\%-70\%$, the white light blinks during charge
Charging box $\geq 70\%$, the green light blinks during charge
Charging box $= 100\%$, Green light is always on

Earphone charging

Put the headphones back in the charging case
When charging, the red light is steady on
When fully charged, the red light goes off

Attention:

1. If the headset has no power for up to 6 months, it may the device cannot be used.
2. If there is sweat or liquid on the earplugs, please dry them before charging, otherwise damage may be caused.

Operation



Previous song

Touch L twice in a row



Next track

Touch R twice in a row



Music play/pause

Touch the L/R button once



ANC Toggle

Press and hold the R for 3S

imiKi

IMI KI T14



User Manual



Operation



Game mode on/off

Touch L three times in a row



Voice dialing (Google\ Siri Feature)

Touch the right earphone three times to enable the voice assistant



Answer the phone

Click once L/R



Hang up/Reject a call

Double click L/R once



Audio switching

Press and hold the L for 3S

Specification

Product model: IMIKI T14

Bluetooth version: V5.3

Charging case voltage: 5V/1A

Charging time for case: <1.5 hours

Charging time for earbud: 1 hour

Frequency response: 20Hz-20KHz

Transmission distance: 15 meters (open environment)

Music time: Upto 8 HRS per charge / Upto 50HRS additional with case (at 60% volume)

Standby time: 90 Days

Speaker size: Φ 10mm

Charging input: Type-C

Charging case battery: 500mAh

Earbud battery: 40mAh

Water Resistance: IPX5

Noise Cancelation: ANC (Active Noise Cancelation)

Number of Mics: 6

Frequently Asked Questions

1. The charging box has power, but why can't the earbuds be charged?

A. Please confirm if the earbuds are correctly placed in the charging box, if the charging contact of the earbuds is not in full contact, it will cause the earbuds to fail to charge.

B. Wipe the charging contacts of the earbuds with a clean cotton cloth to ensure there is no foreign object interference earbuds charging.

If there is sweat or liquid on the charging contact of the charging box, the earbuds may appear corrosion, please clean it before inserting the earbuds into the charging box.

2. Place the earbuds in the charging box and close the charging box, why are the earbuds still in the connection status?

It should be that the earbuds were not properly placed in the charging box, and check point B.

3. Why does the earbuds suddenly stall when using it?

Due to the characteristics of Bluetooth earphones, electromagnetic interference in the area may cause temporary time lag, you can change the location of use.

Cautions

- ① Please use this product with safety guarantee.
- ② Please do not discard the product in the fire or the high temperature because the built-in battery will cause the explosion easily.
- ③ Please do not rough operation of the product such as wrestling collision, removal or modification of the earphone.
- ④ Please use original accessories. Accidents caused by other accessories will not be covered by the warranty.
- ⑤ Please charge the storage box with the charger of DC5V/1A to avoid burning the product.
- ⑥ Please pull out the charging line in time after charging is completed to avoid leaving the product in the state of charging for a long time.
- ⑦ Please stay away from large WIFI, routers or other high frequency transmitting devices, so as to avoid interference of other signals by the earphones, resulting in music stuck or disconnected.
- ⑧ Please use this product in an effective environment (10 meters). And there should be no physical barrier between the phone and the earphone (such as wall, etc.)
- ⑨ Please keep away from water.
- ⑩ It is recommended to use the product below 80% Volume in order to protect hearing.